

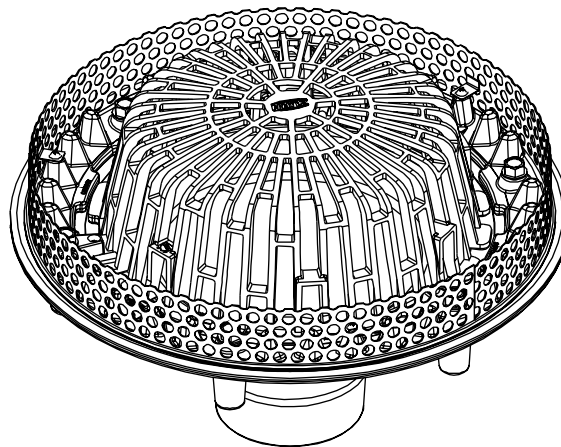


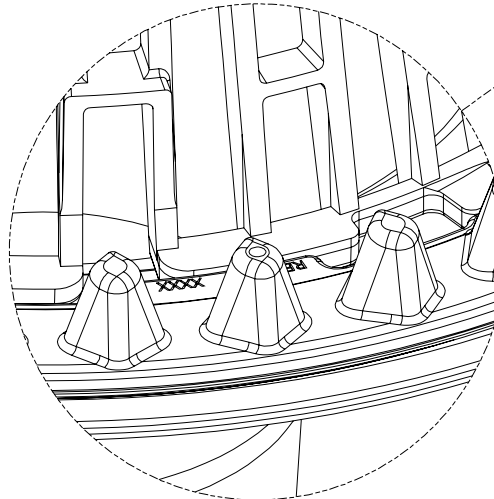

Z100F-84 FLOFORCE™ ROOF DRAIN WITH PERFORATED GRAVEL GUARD INSTALLATION INSTRUCTIONS

Design and Dimensional Data (inches and [mm]) are Subject to Manufacturing Tolerances and Change Without Notice

1. For drain installation instructions, reference Zurn document Form # RD139.
2. Locate the drilled and tapped screw holes on the top surface of the cast iron clamping collar lugs. There are three tappings for drain outlet sizes 2 thru 4 [51 thru 102], and four tappings for drain outlet sizes 6 thru 8 [152 thru 203].
3. Position the perforated gravel guard so that the inside screw hole tabs align with the tappings in the cast iron clamping collar.
4. Set the perforated gravel guard down, centering it around the clamping collar.
5. Using the hardware provided, insert the #10-24 Round Head Machine Screws into each tab hole and engage each tapping.
6. Tighten down the machine screws with a screwdriver until the gravel guard is snug and secured.

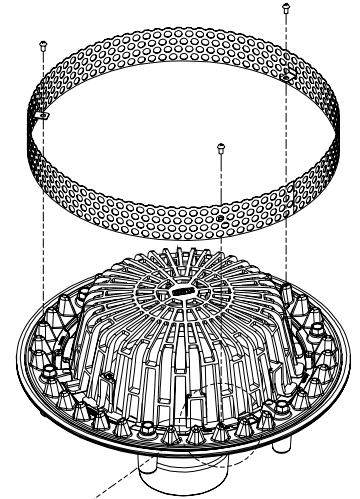

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation
1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited
7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

www.zurn.com

Rev. A
Date: 05/05/2022
C.N. No. 144476
Form No. RD145

Page 1 of 1