



Z100F-VP FLOFORCE™ ROOF DRAIN WITH VANDAL-PROOF INSTALLATION INSTRUCTIONS

Design and Dimensional Data (inches and [mm]) are Subject to Manufacturing Tolerances and Change Without Notice

1. For drain installation instructions, reference Zurn document Form # 139
2. Position the dome so that the notches on the bottom rim of the dome align with the protruding lugs on the clamping collar. For drain sizes 2 thru 4 [51 thru 102], there are three notches, and for drain sizes 6 thru 8 [152 thru 203], there are four notches (Fig 1).

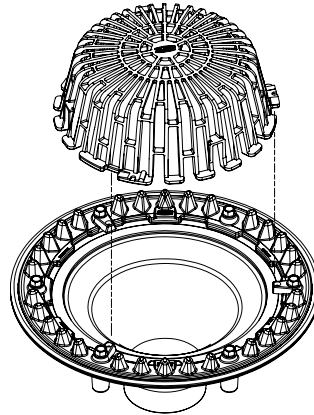


Figure 1

3. Lower the dome onto the clamped roofing material (Fig 2) and rotate the dome clockwise (Fig 2a) until the lugs engage the rotational stop features of the dome (Fig 2b).

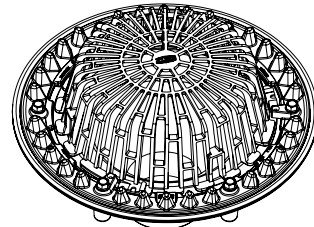


Figure 2

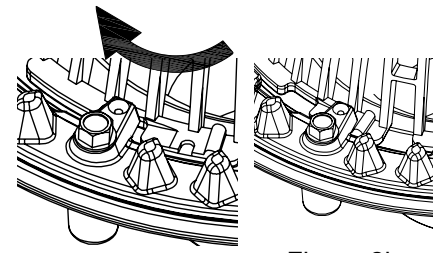


Figure 2a

Figure 2b

4. Insert the flat-head vandal-proof screws into the threaded holes of each lug on the clamping collar.
5. Using a pin-in-hex driver bit, thread each screw into the clamping collar until the screws bottom out and lock the dome in place (Fig 3).

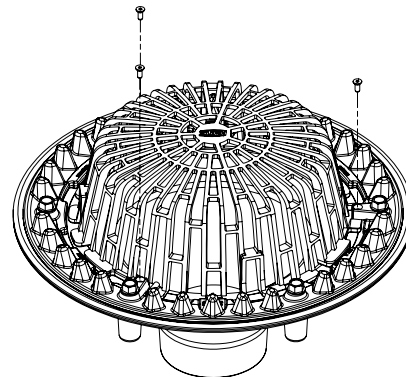


Figure 3

6. Conservatively try to rotate the dome counter-clockwise to ensure the dome cannot move (Fig 4).

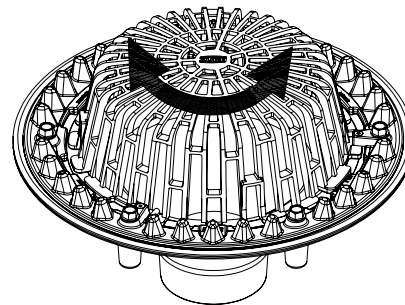


Figure 4

Note: For additional drain installation instructions, reference Zurn document Form #RD139

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation
1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited
7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

www.zurn.com

Rev. A
Date: 05/05/2022
C.N. No. 144476
Form No. RD144