


Z1390-76 POST HYDRANT Exposed Head, Non-Freeze

SPECIFICATION SHEET

TAG

Dimensional Data (inches and [mm]) are Subject to Manufacturing Tolerances and Change Without Notice

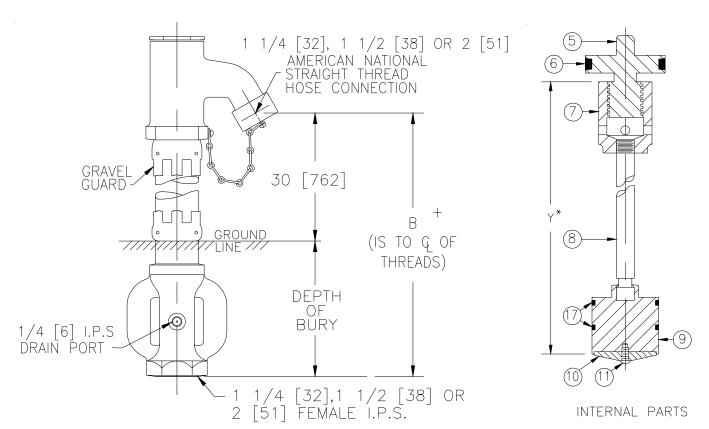

Depth of Bury Feet	B Dim. Feet	Approx. Wt. Lbs. [kg]
2 [610]	4 1/2 [1372]	57 [26]
3 [914]	5 1/2 [1676]	62 [28]
4 [1219]	6 1/2 [1981]	67 [30]
5 [1524]	7 1/2 [2286]	72 [33]
6 [1829]	8 1/2 [2591]	77 [35]
7 [2134]	9 1/2 [2896]	82 [37]
8 [2438]	10 1/2 [3200]	87 [39]
9 [2743]	11 1/2 [3505]	92 [42]
10 [3048]	12 1/2 [3810]	97 [44]

ENGINEERING SPECIFICATION: ZURN Z1390-76

Exposed, non-freeze post hydrant. Complete with galvanized steel casing and cast aluminum casing guard, all bronze interior parts, bronze seat and replaceable seat washer, and non-turning operating rod with free-floating compression closure valve with 1 1/4 [32],1 1/2 [38] or 2 [51] connection. "T" handle operating key included. Hydrant is equipped with a tapped 1/4 [19] drain port in valve housing, thread cap and chain. +

Note:

- 1. 'B' dim. based on outlet connection 30 [762] above ground.
- 2. <u>IMPORTANT</u> Hydrant must be opened one turn to seal drain port during use.
- +3. Hose must be removed and cap left off long enough for proper water relief through drain port.

PINOITEO	(Check/specify	annropriato	ontions)
OF HUNS	(Uneck/specify	appropriate	ODHORSI

SUFFIXES

_____ -BC Bronze Casing

_ -RK Hydrant Parts Repair Kit

-WH Wheel Handle

<u>ltem</u>	<u>Name</u>	<u>Quan.</u>
<u>5</u>	Operating Screw	<u>1</u>
<u>6</u>	O-Ring	<u>1</u>
<u>7</u>	Operating Coupling	<u>1</u>
<u>8</u>	Operating Rod	<u>1</u>
<u>9</u>	Washer Guide	<u>1</u>
<u>10</u>	Washer (neoprene)	<u>1</u>
<u>11</u>	Screw	<u>1</u>
<u>17</u>	O-Ring	2

PARTS LIST

REV. A DATE: 05/05/08 C.N. NO. 98458

*WHEN ORDERING REPLACEMENT PARTS SPECIFYY DIM.

DWG. NO. P-14432 PRODUCTNO. Z1390-76